

1

Right upper tension




Stitches are balanced.

Threads are locked in centre of fabric.

2

Upper tension too tight

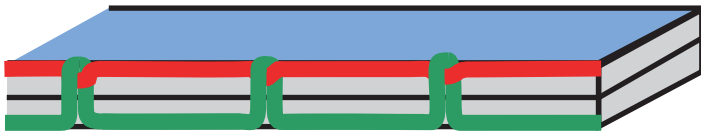


Lower stitches appear on right side.



Loosen the tension by choosing lower value.

3

Upper tension too loose

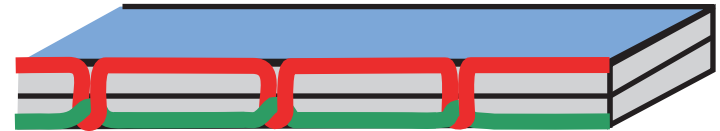

Upper stitches appear on wrong side.



Tighten the tension by choosing upper value.